

# **MANUAL**

# **HZ-1100LW-V2.0**

## CONTEUDO

FUNCIONAMENTO .....	1
MODO UPLOAD .....	2
LIGANDO E MODO STAND BY .....	2
INTERFACE .....	3
LINGUAGEM .....	2
CONFIGURAÇÃO MAIUSCULA E MINUSCULA .....	4
Trigger Mode .....	4
AVISO SONORO .....	4
MARCA FINAL .....	5
LEITURA DE CODIGO REVERSO NEGATIVO .....	5
UPCA .....	5
UPCE .....	5
EAN8 .....	6
EAN13 .....	6
ISBN .....	6
ISSN .....	6
CODE 39 .....	7
CODE 32 .....	7
CODE 128 .....	7
CODE 93 .....	8
CODE 11 .....	8
CODABAR .....	8
Industrial 2 of 5 .....	8
Interleaved 2 of 5 .....	9
MSI .....	9
GS1 Omnidirectional .....	9
GS1 Limited .....	9
Febran .....	9
ADICIONAR PREF E SUFIXO .....	10
Hide characters .....	10
Barcode Table .....	11

## ■ Scaneie o código para configurar o leitor



Restaurar o padrão de fábrica  
(decoding function)



Restaurar o padrão de fábrica  
(wireless function)

Nota: faça a leitura dos dois códigos para resetar o seu leitor, na mesma sequência

## Modo de Operação

### ■ 2.4G Match Operation:

O receptor 2.4G foi combinado por padrão, conecte o receptor e digitalize o código de configuração "2.4G" para usar. Se você precisar fazer a correspondência novamente, primeiro desconecte o receptor, depois reconecte-o ao computador, leia o código de configuração "Modo 2.4G" em 20 segundos e a correspondência será bem-sucedida.



2.4G Mode

## Modo de upload

### ■ Três modos de upload: modo de upload instantâneo, modo Storage M,

#### Non-losing Mode

##### ► Modo de upload instantâneo

Dados de upload instantâneo para o seu computador



Instant Upload Mode

- (1) Upload com sucesso: a campainha tocou "Di".
- (2) Falha de upload: a campainha tocou "Di-di-di".

##### ► Modo de armazenamento

No modo de armazenamento, o código de barras será armazenado na própria memória do scanner e não aparecerá no seu computador instantaneamente. O código de barras só aparece no seu computador quando você digitaliza o código de configurações "dados de upload" dentro do intervalo de transmissão sem fio.



Storage Mode

Nota: Durante o uso, se os dados não puderem ser carregados, confirme se estão definidos para o modo de armazenamento.

##### ► Modo não perdedor

O código de barras será carregado para o receptor em tempo real quando o scanner estiver na faixa de transmissão sem fio. Quando o scanner estiver fora do alcance de transmissão sem fio, os dados serão armazenados na própria memória do scanner. Depois que o scanner estiver chegando ao intervalo de transmissão sem fio, digitalize o código de barras de configuração "Upload Data", os dados perdidos armazenados serão carregados automaticamente no computador.











Modo não perdedor

Nota: Antes de usar o modo de não perder, é melhor digitalizar o código "Dados Claros" para limpar os dados do scanner.

 Mostrar armazenamento total	 Enviar dados
 Alta velocidade de upload (*padrão)	 Baixa velocidade de upload
 Dados Claros	



## Configuração de Energia

 Battery Reserve	 Standby Immediately
 Set the time for automatic shutdown	 2 Minutes-Default
 10 Minutes	 20 Minutes
 8 hours	 Never Standby





► Set the time for automatic shutdown



















For example, if you want to set the power off time to be 20 Minutes. First scan "Set the time for automatic shutdown", then scan "20 Minutes".



















## Interface setup



















 USB-HID*Default	 USB virtual COM
<p>Note: In USB virtual COM mode, the scanner needs to work with driver and serial software. Please contact us if you need to set it to USB virtual COM mode, we will send you the driver and the serial software.</p>	

## Configuração de Linguagem

 UNITED STATES*	 JAPAN
 FRANCE	 GERMANY

 SPAIN	 SPAIN(MEXCIO)
 ITALY	 PORTUGAL(BRAZIL)
 TURKEY	 PORTUGAL
 CZECH REPUBLIC	 NORWAY
 RUSSIA	 FINLAND(SWEDEN)
<b>Capital &amp; Lowercase Setup</b>	
 All Capital	 All Lowercase
 Swap Capital/Lowercase	 No Swap*
<b>Trigger Mode</b>	
 Modo de leitura continua*	 Keys Trigger(*default)
<b>Buzzer Setup</b>	
 Volume-ON*	 Volume-OFF

 CR	 None
 TAB	 LF+CR
<b>Reverse Code Reading(black background)</b>	
 White in black background-ON	 White in black background-OFF*
<b>UPCA</b>	
 UPCA-ON	 UPCA-OFF
 UPCA Check Digit-ON	 UPCA Check Digit-OFF
 UPCA System Digit-ON	 UPCA System Digit-OFF
 UPCA to EAN13 -ON	 UPCA to EAN13 -OFF
<b>UPCE</b>	
 UPCE-ON	 UPCE-OFF
 UPCE Check Digit-ON	 UPCE Check Digit-OFF

 UPCE System Digit-ON	 UPCE System Digit-OFF
 UPCE to UPCA-OFF	 UPCE to UPCA-ON
<b>EAN8</b>	
 EAN8-ON	 EAN8-OFF
 EAN8 Check Digit-ON	 EAN8 Check Digit-OFF
 EAN8 System Digit-ON	 EAN8 System Digit-OFF
<b>EAN13</b>	
 EAN13-ON*	 EAN13-OFF
 EAN13 Check Digit-ON*	 EAN13 Check Digit-OFF
<b>ISBN</b>	
 EAN13 to ISBN-ON*	 EAN13 to ISBN-OFF
<b>ISSN</b>	
 EAN13 to ISSN-ON*	 EAN13 to ISSN-OFF



## UPC/EAN Extra Code



2 Extra Code



5 Extra Code



2 or 5 Extra Code



Extra Code-OFF

## CODE 39



CODE39-ON\*



CODE 39 - O F F



Transmit Check Character  
Verification



Do Not Transmit Check Character  
Verification



CODE39 MOD43-OFF



CODE39 MOD43-ON



Output Start&End Digit-ON



Output Start&End Digit-OFF



Full ASCII-OFF



Full ASCII-ON

## CODE 32



CODE32 -ON



CODE32 -O F F\*



















## CODE 128



CODE128-ON\*



CODE12 8- OF F

 CODE128 Check Digit-ON	 CODE128 Check Digit-OFF*
<b>CODE 93</b>	
 CODE93-ON*	 CODE 93 - O F F
 Transmit Check Character After Verification	 Do Not Transmit Check Character After Verification
 CODE93 MOD47-OFF	 CODE93 MOD47-ON
<b>CODE 11</b>	
 CODE11-ON	 CODE11-OFF
 One Check Bit-ON	 Two Check Bit-ON
<b>CODABAR</b>	
 CODABAR-ON*	 CODABAR-OFF
 Output Start&End Digit-ON	 Output Start&End Digit-OFF
<b>Industrial 2 of 5</b>	
 Industrial 2 of 5-ON*	 Industrial 2 of 5-OFF

## Interleaved 2 of 5



Interleaved 2 of 5-ON



Interleaved 2 of 5-OFF



Interleaved Check 2 of 5-ON



Interleaved Check 2 of 5-OFF



Transmit Check Character After Verification



Do Not Transmit Check Character After Verification

## MSI



MSI-ON



MSI-OFF\*

## GS1 Omnidirectional



GS1 Omnidirectional-ON



GS1 Omnidirectional-OFF

## GS1 Limited



GS1 Limited-ON



GS1 Limited-OFF

## Febran



Febran-ON



Fe bran- OF F\*

### Add Prefix/Suffix



Add Prefix



Add Suffix



Cancel Prefix



Cancel Suffix



Save settings

E.g. If you want to add X and Y before the barcode , Please scan the following code in order:

"Add Prefix "→Barcode Table"X"Barcode Table"Y"→"Save settings"

### Hide characters



Hide the front characters

















































































 

Hide the behind characters













E.g. If you want to hide the first two characters of the barcode , Please scan the following code in order:

































"Hide the front characters"→Barcode Table"0"→Barcode Table"2"

## Barcode Table

 SOH	 STX	 ETX
 EOT	 ENQ	 ACK
 BEL	 Backspace	 TAB
 LF	 VT	 FF
 CR	 SO	 SI
 DLE	 DC1	 DC2
 DC3	 DC4	 NAK
 SYN	 ETB	 CAN
 EM	 SUB	 ESC
 FS	 GS	 RS
 US	 SPACE	 !
 "	 #	 \$
 %	 &	 '

 ( )	 *	 +
 -	 .	 .
 /	 0	 0
 1	 2	 3
 4	 5	 6
 6	 8	 9
 7	 8	 9
 <	 >	 <
 =	 >	 ?
 @	 A	 B
 C	 D	 E
 F	 G	 H
 I	 J	 K
 L	 M	 N

 O	 P	 Q
 R	 S	 T
 U	 V	 W
 X	 Y	 Z
 [	 \	 ]
 ^	 _	 `
 a	 b	 c
 d	 e	 f
 g	 h	 i
 j	 k	 l
 m	 n	 o
 p	 q	 R
 s	 t	 u

 v	 w	 x
 y	 z	 {
 	 }	 ~
 Delete	 F1	 F2
 F3	 F4	 F5
 F6	 F7	 F8
 F9	 F10	 F11
 F12	 INSERT	 HOME
 Page up	 Delete	 END
 Page down	 Right arrow	 Left arrow
 Down arrow	 Up arrow	